


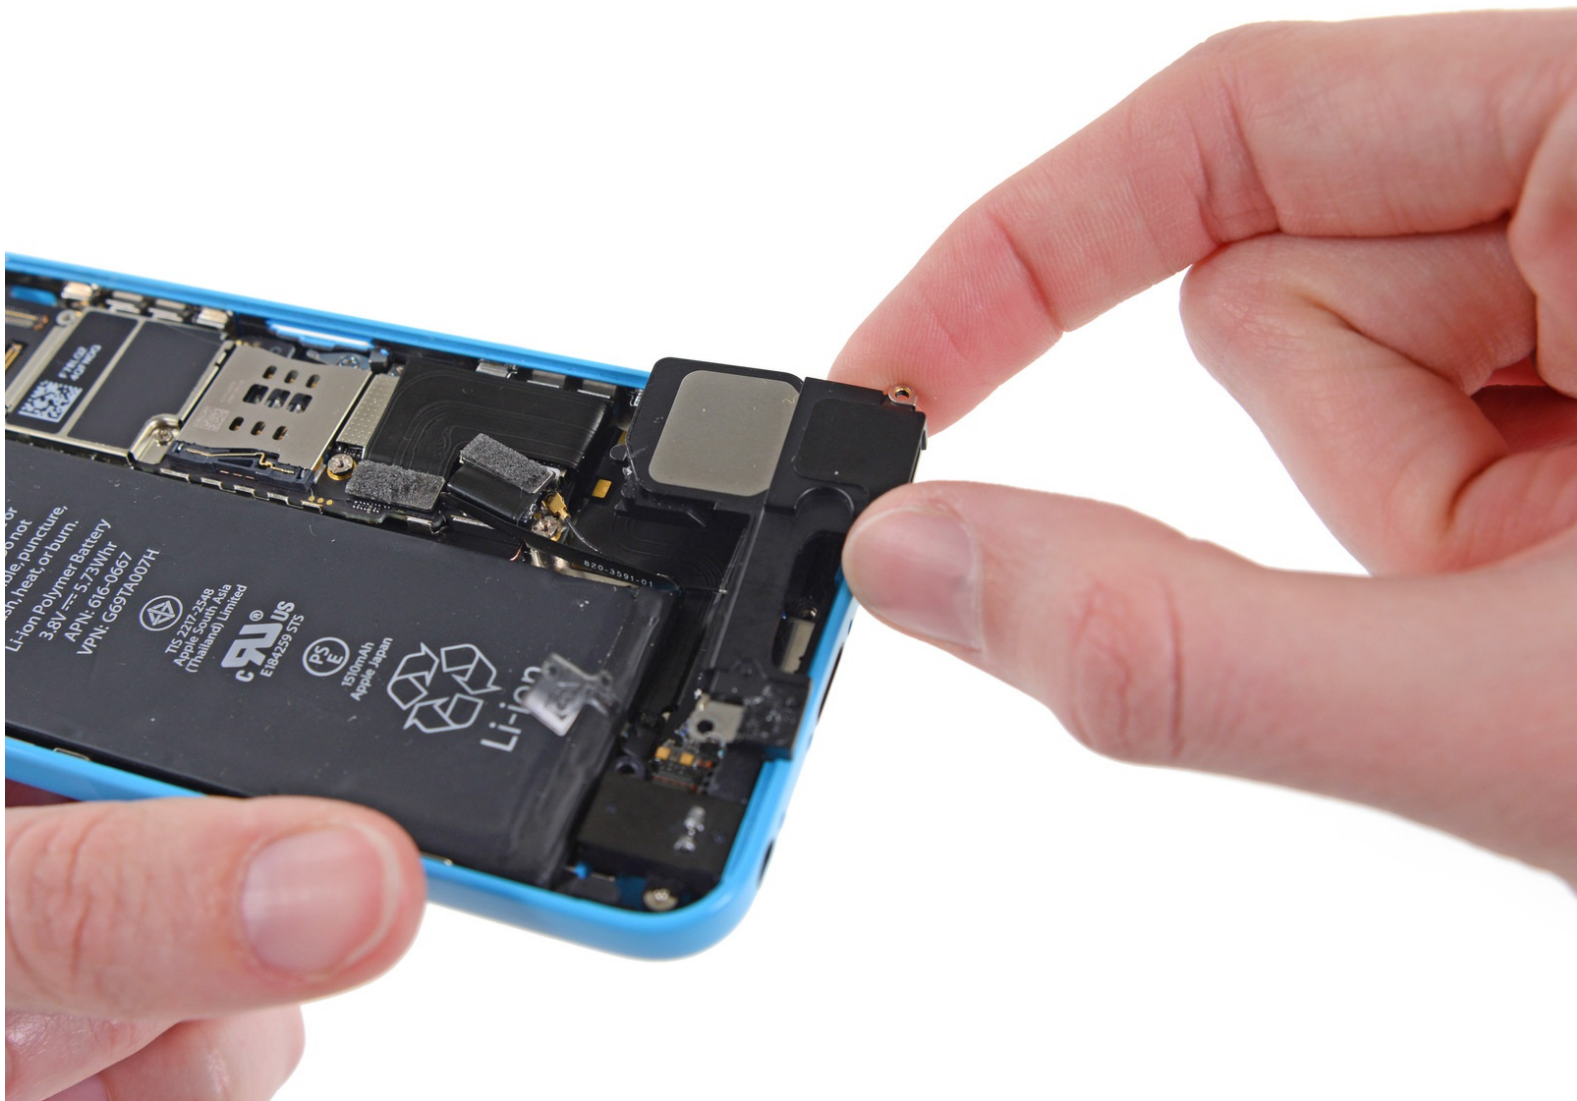

iPhone 5c Speaker Replacement

Use this guide to replace the speaker assembly in your iPhone 5c.

Written By: Sam Lionheart



INTRODUCTION

Replace a broken speaker in an iPhone 5c to restore speakerphone capabilities.



TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)



PARTS:

- [iPhone 5c Loudspeaker](#) (1)

Step 1 — Taping the display glass



- If your display glass is cracked, keep further breakage contained and prevent bodily harm during your repair by taping the glass.
- Lay overlapping strips of clear packing tape over the iPhone's display until the whole face is covered.
 - ⓘ This will keep glass shards contained and provide structural integrity when prying and lifting the display.

 Wear safety glasses to protect your eyes from any glass shaken free during the repair.

Step 2 — Removing the Pentalobe screws



 Before you proceed, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.8 mm P2 Pentalobe screws on either side of the Lightning connector.


Step 3 — Starting the iSlack Opening Procedure



i The next two steps demonstrate using the [iSlack](#), a great tool for safely opening the iPhone 5c that we recommend for anyone doing more than one repair on an iPhone 5, 5s, or 5c. **If you aren't using the iSlack, skip to [Step 5](#).**

- Close the handle on the iSlack, opening the suction-cup jaws.
- Place the bottom of your iPhone in between the suction cups, against the plastic depth gauge.
 - The top suction cup should rest just above the home button.
- Open the handles to close the jaws of the iSlack. Center the suction cups and press them firmly onto the top and bottom of the iPhone.

Step 4 — Finishing the iSclack Opening Procedure

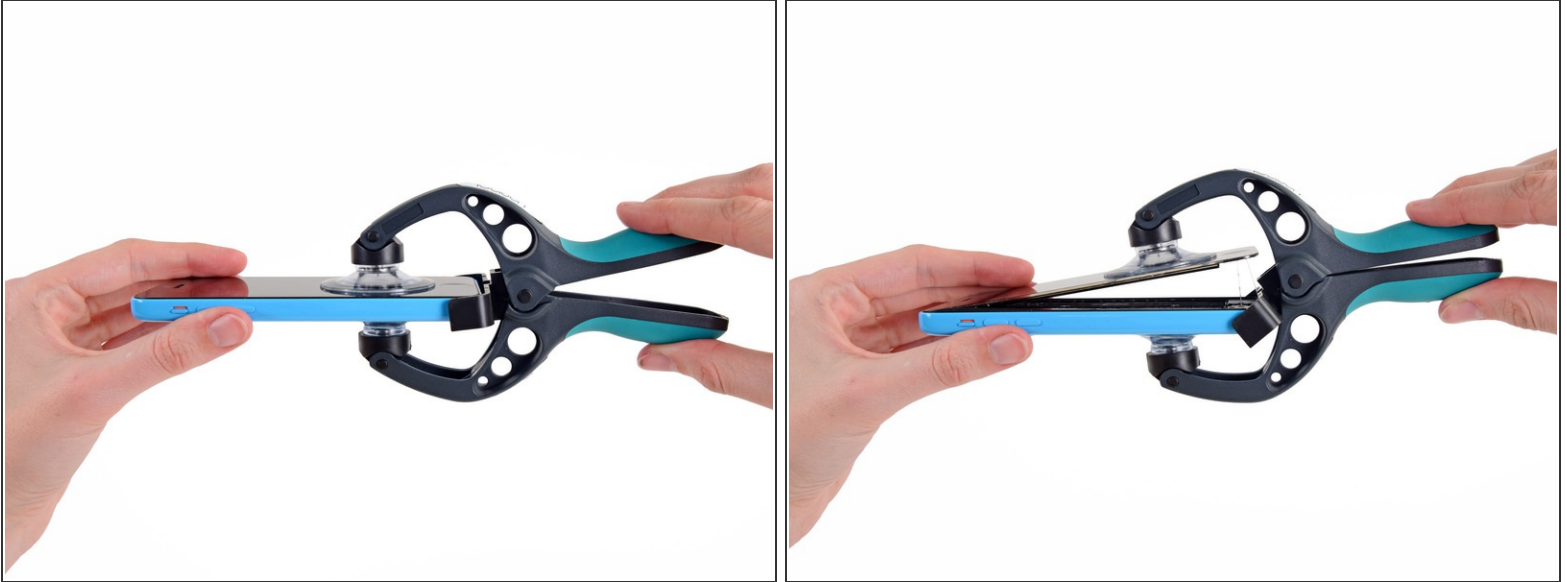

- Hold onto your iPhone securely and close the handle of the iSclack to separate the suction cups, pulling the front panel up from the rear case.
- The iSclack is designed to safely open your iPhone just enough to separate the pieces, but not enough to damage any cables.
- ⓘ Peel the two suction cups off your iPhone.
- **Skip the next three steps and continue on to [Step 8](#).**

Step 5 — Manual Opening Procedure



- Press a suction cup onto the screen, just above the home button.
- ⓘ Be sure the cup is completely on the screen to get a tight seal.

Step 6 — Start lifting the front panel assembly



- i** Make sure the suction cup is firmly attached to the front panel assembly.

 - While holding the iPhone down with one hand, pull up on the suction cup to slightly separate the front panel assembly from the rear case.
- i** Take your time and apply firm, constant force. The display assembly is a much tighter fit than most devices.


 - With a plastic opening tool, begin to gently pry the rear case down, away from the display assembly, while you pull up with the suction cup.
- i** There are several clips attaching the front panel assembly to the rear case, so you may need to use a combination of the suction cup and plastic opening tool to free the front panel assembly.

Step 7



- Pull the plastic nub to release the vacuum seal on the suction cup.
- Remove the suction cup from the display assembly.

Step 8 — Opening up the phone

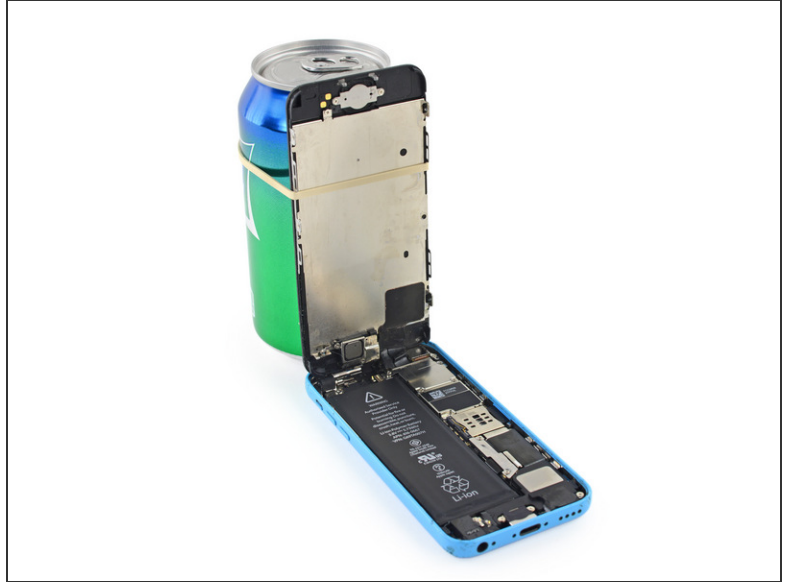


- Lift the home button end of the front panel up to gain access to the connectors near the top of the phone.
- Open the display to about a 90° angle, and lean it against something to keep it propped up while you're working on the phone.
 - In a pinch, you can use an unopened canned beverage to hold the display.
- Add a rubber band to keep the display securely in place while you work. This prevents undue strain on the display cables.

Step 9



- Remove the two 1.6 mm Phillips #000 screws securing the metal battery connector bracket to the logic board.

Step 10

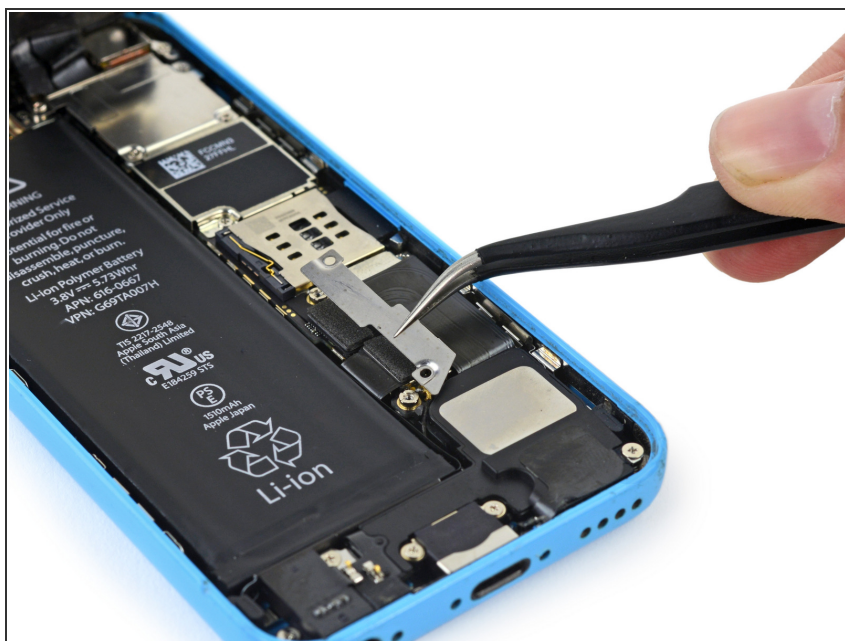

- Remove the metal battery connector bracket from the iPhone.

Step 11 — Disconnecting the battery connector



- Use the flat edge of a spudger to pry the battery connector up off the logic board.

Step 12



- Remove the following Phillips #000 screws securing the front panel assembly cable bracket to the logic board:

- Two 1.3 mm screws


- One 1.7 mm screw

- One 3.25 mm screw

⚠ It is especially important to keep track of your screws in this step for reassembly. Accidentally using the 3.25 mm screw or the 1.7 mm screw in the bottom right hole will result in significant damage to the logic board causing the phone to no longer boot properly.

⚠ Be careful not to over-tighten the screws. If they don't fit easily when you are securing them, they may be the wrong size, don't force them.

Step 13

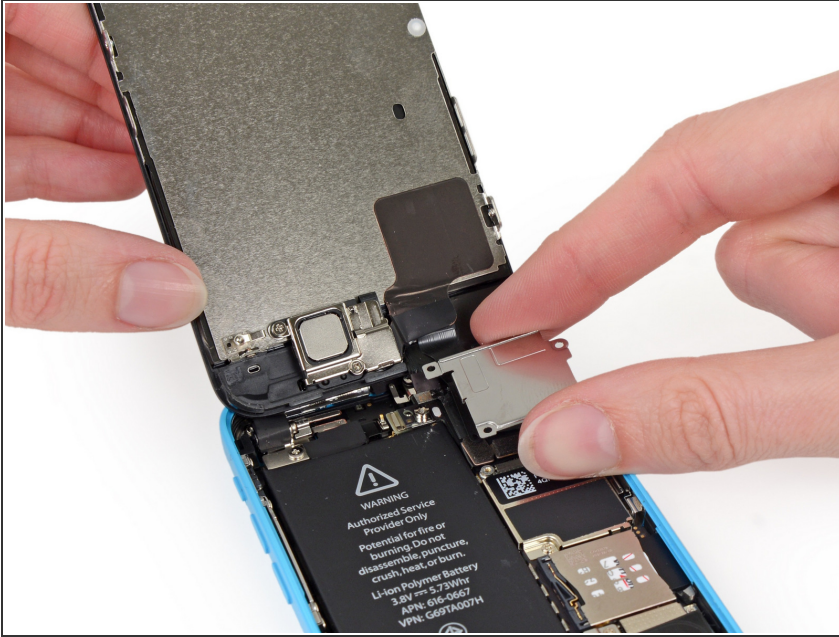

- Remove the front panel assembly cable bracket from the logic board.


Step 14 — Disconnecting the front panel assembly cables



- Use a plastic opening tool to disconnect the front-facing camera and sensor cable connector.

⚠ Be sure to **only** pry up on the connector, and not on the socket on the logic board.

Step 15

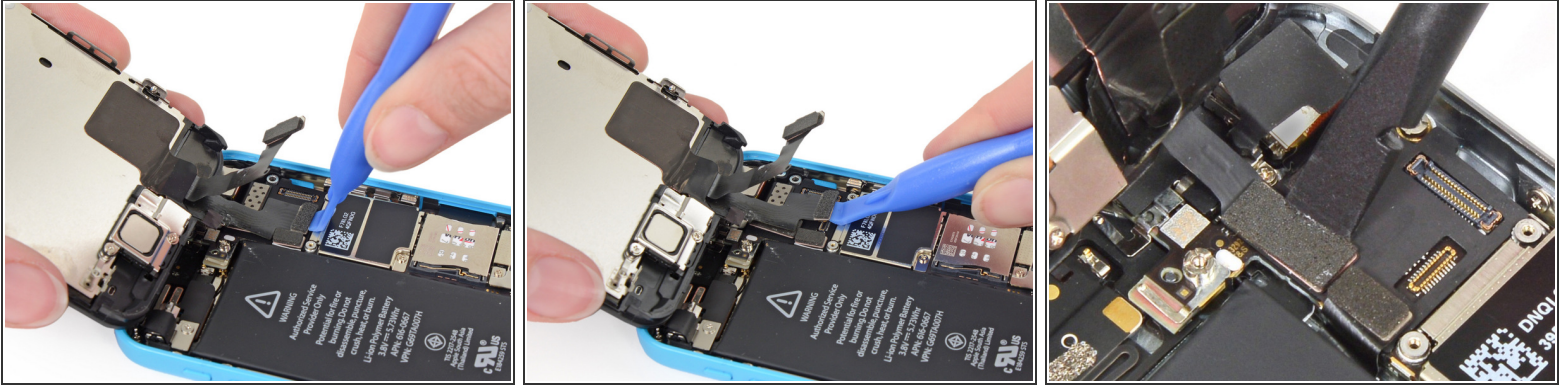


- Use a plastic opening tool to disconnect the LCD cable connector.

⚠ The LCD and Digitizer connectors are on the same cable assembly, so prying the LCD connector up should disconnect both connectors. Double check that the two cables are fully disconnected before removing the display.


- 🔍** When reassembling your phone, the LCD cable may pop off its connector. A blank screen, or white lines on the display could be caused by a loose connection. Should this happen, reconnect the cable and power cycle your phone. The best way to power cycle your phone is to disconnect and reconnect the battery.

Step 16 — Separating front panel assembly and rear case

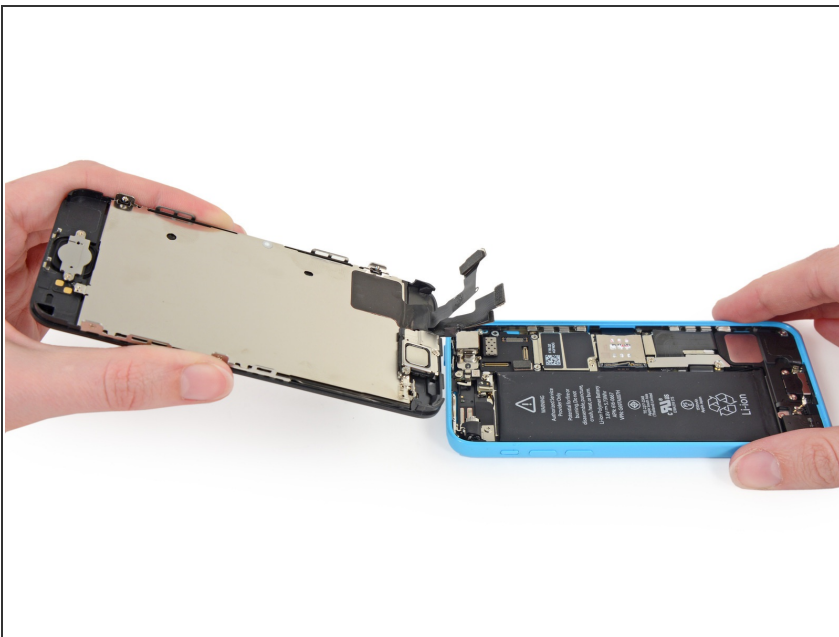

- Remove the front panel assembly from the rear case.

Step 17 — Speaker

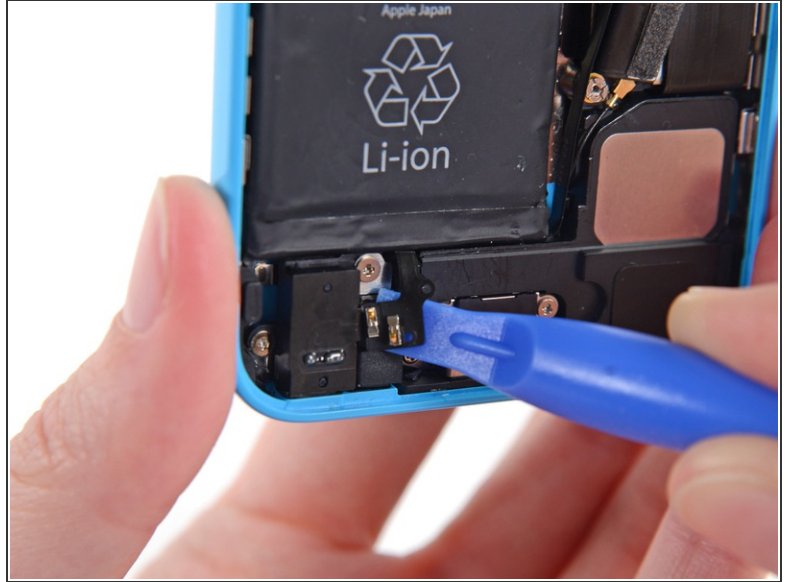


- Use a plastic opening tool to peel the home button spring contact cable up from the speaker enclosure.

Step 18



- Remove the following screws securing the speaker enclosure to the rear case:
 - Two 2.7 mm Phillips #000 screws
 - One 2.2 mm Phillips #000 screw

Step 19

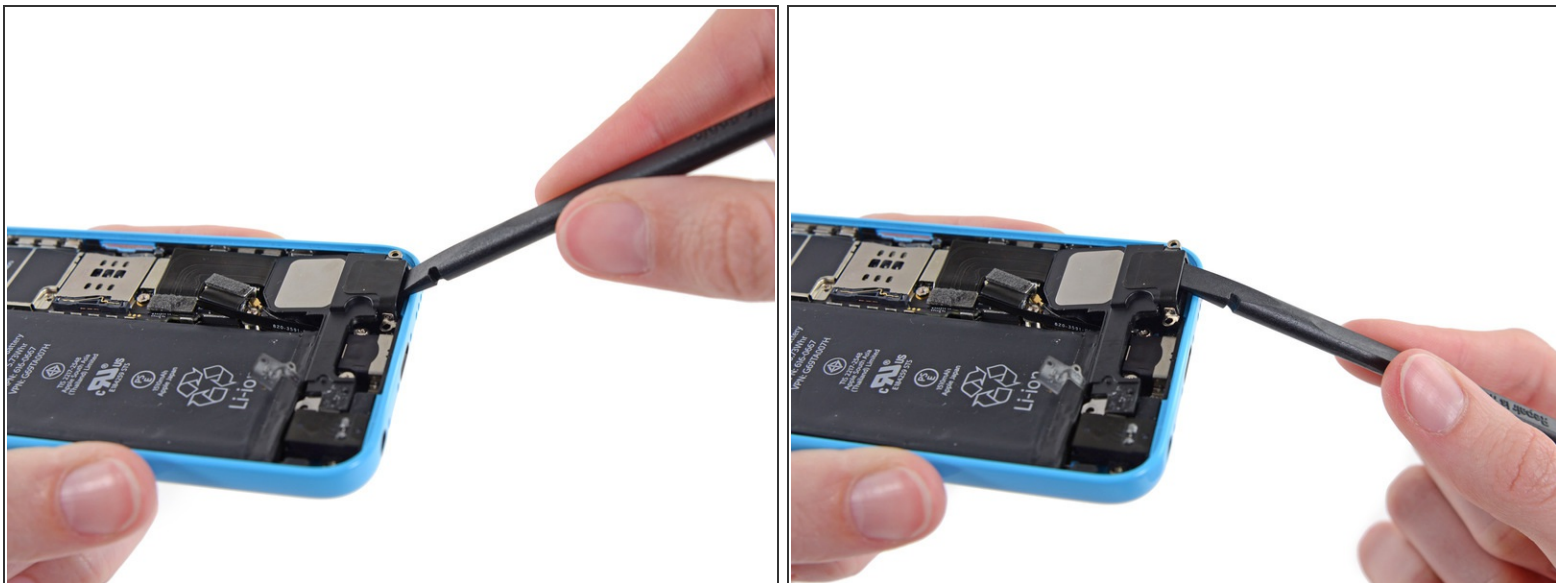



- Use the flat end of a spudger to gently pry the speaker enclosure up from the rear case.

Step 20



- Remove the speaker enclosure. Be careful not to snag it on the antenna cable.

Step 21

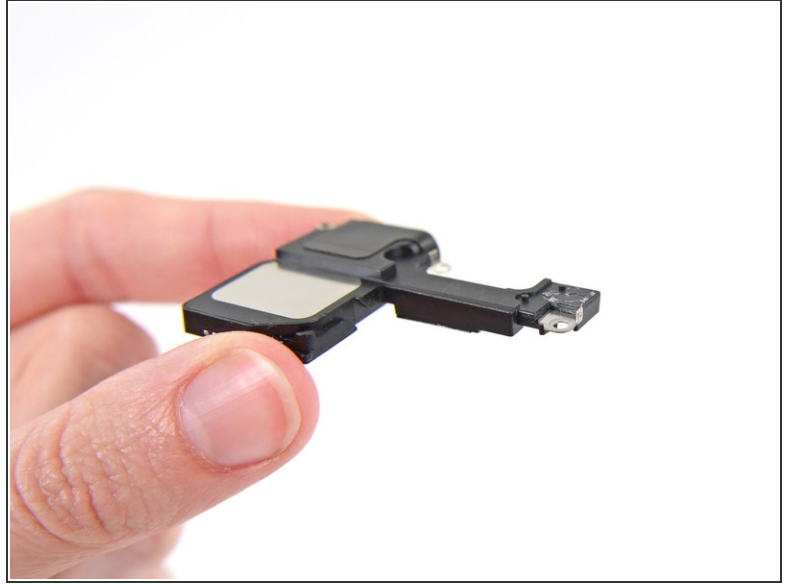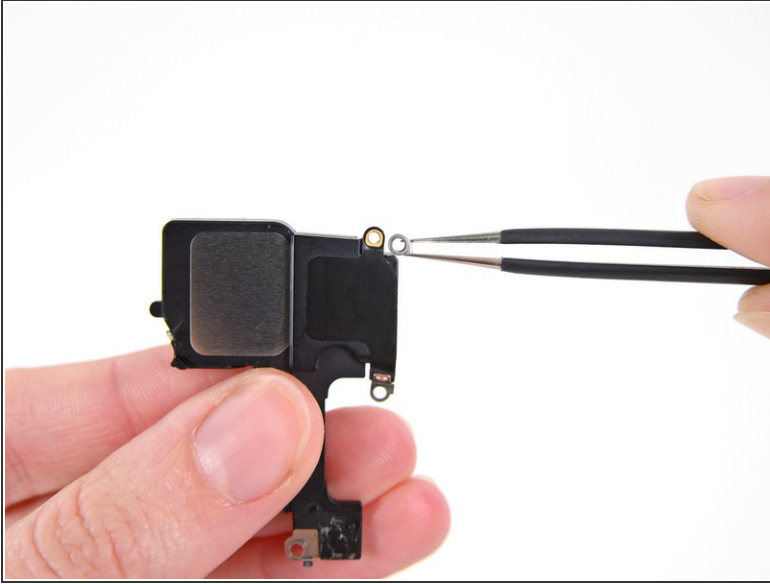

- The far right screw hole on the speaker has a contact bracket wrapped around it. Remove it and note the orientation for reassembly.
 - ☑ The flat portion of the contact clip should rest against the speaker, as shown.
- ⓘ The alignment bracket on the far end of the speaker assembly is adhered, but may fall off if handled aggressively.
 - ☑ The angled end should face up and line up with the outside edge of the speaker.

Step 22



i Your replacement speaker may be missing the contact-bearing sticker shown here; be sure to transfer it to the new part.

- Use a plastic opening tool to lift the sticker from the speaker.
- Peel up and remove the sticker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-18 05:26:11 PM.